

RenoLink Installation Guide V1.96

It is imperative to deactivate your anti-virus software or any other protection before installation because some anti-virus software wrongly blocks our software.

Important: our software works only with genuine OBDLINK SX USB and OBDLINK EX USB interfaces. (does not work with Chinese clones bought on Aliexpress or eBay or other)


**1. Download RenoLink software version 1.96 via the RENOLINK SOFTWARE DOWNLOAD section on our website www.renolink.fr or via the link below:
<https://ressource-renolink-france.fr/renolink196.zip>**

**2. Connect your interface to USB and install the driver via the link below:
https://www.ftdichip.com/Drivers/CDM/CDM21228_Setup.zip**


3. Install the RenoLink196.exe software



4. Once the software is installed, go to your local hard drive and then Programs (or X64 or x86 Programs) and then to the RenoLink folder.

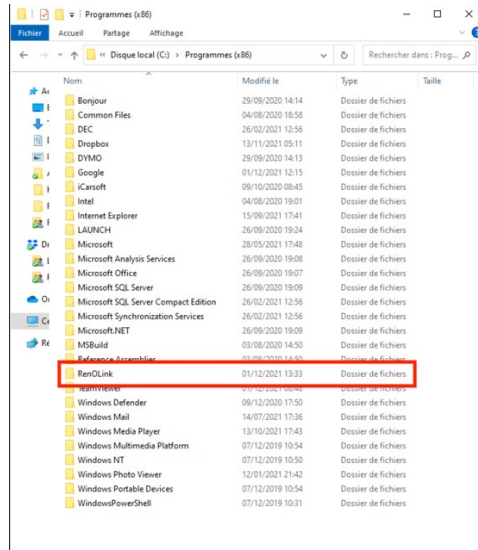


5. Right-click on the IFPREP2.exe file and click on "Run in administrator mode". If the IFPREP2.exe file is not present, it means that your anti-virus software has deleted it. Deactivate it then start again at step 3.

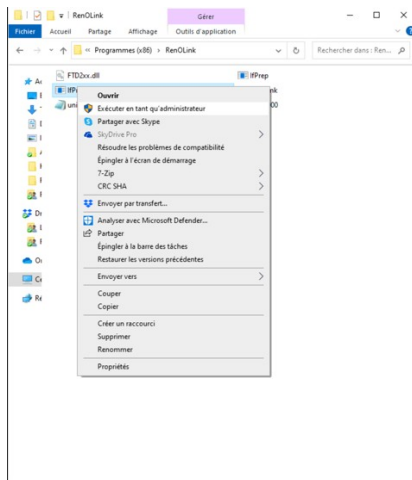

6. Your interface must be connected to your computer via USB for this step. Click on the button 115200>1000000, you will get a message confirming the speed change. If you have the message INVALID INTERFACE, it is not serious it is that you are already in the good speed.



7. Then click on the PREPARE INTERFACE button, this will create a renolink.txt file in your RenoLink folder.

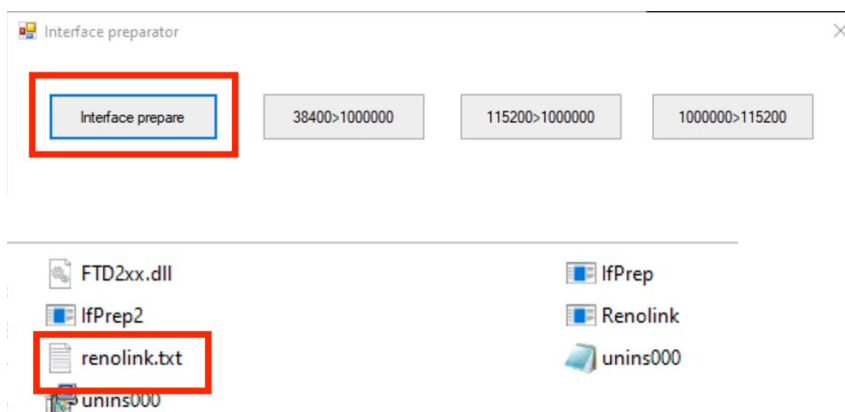

8. Send this renolink.txt file by email to: activation@renolink.fr Important : Attach a proof of purchase such as an invoice! No proof of purchase = no activation.